

This step-by-step guide will help you replace the LINK quick release lever on your FLYSURFER product. Follow these simple instructions to ensure proper installation and optimal performance of the quick release system.



**1.** Open the LINK quick release system by loosening the lever. Ensure the mechanism is fully disengaged.



**2.** Use a 2mm Allen key to turn the screw counterclockwise. Loosen it, but do not remove it completely.



**3.** Make sure the screw stays partially threaded and securely held in place.



**4.** Remove the LINK lever and insert the new one, ensuring proper alignment.



**5.** Tighten the screw, verifying that the thread is aligned properly. Carefully screw it back in.



**6.** Fully tighten the screw, ensuring the lever is secure and stable.



**7.** Check that the screw is flush with the surface and does not protrude.

**8.** Close the LINK quick release system and test to ensure the lever functions correctly.

After completing the replacement, make sure the lever functions smoothly.

If you encounter any issues or have further questions, feel free to contact our support team at [support@flysurfer.com](mailto:support@flysurfer.com)

**Thank you for trusting FLYSURFER!**

As a token of our appreciation, scan the QR code below to receive a discount on your next purchase in our online store.

We're here to support your adventures!